


jetBook® - Lite

Portable Reading Device

QUICK START GUIDE

The general view and external features of *ECTACO® jetBook® - Lite* are shown below.

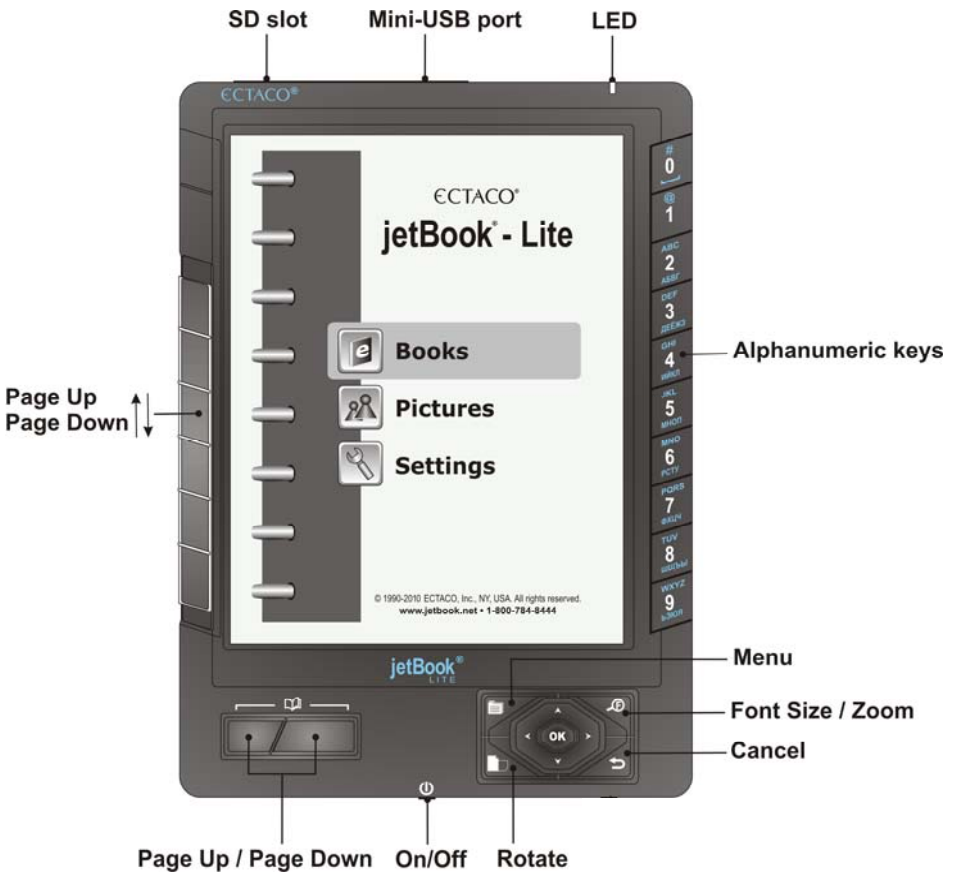

POWER SUPPLY

The device is powered by four AA batteries.

How to Replace the Batteries

- Ensure the power is off. Press *On/Off* to turn the device off.
- Remove the used batteries and replace them with new ones. Make sure to place the batteries according to the polarity marks (+ -). Do not mix old and new batteries.

Power On / Power Off

- Use the *On/Off* button to turn the device On or Off.

In the rare event that the data on the screen is corrupted or a program is not responding properly, you will need to perform a reset. The *Reset* button is located on the back of the device. It can be accessed with any thin object like a paper clip. Never use a needle or a sharp pin for this purpose since it can damage the device.

- ✓ After the system has been reset, press and hold the *On/Off* button for 3 seconds to turn the device on. It may take about 1 minute for the device to start up.

INSTALLING SD CARD

- Unfasten the SD slot cover.
- If the card is not installed, slide it into the slot – the contacts of the card face up, label face down. Push the card gently until it clicks into place.
- To eject the card, just push it in slightly.











MAIN MENU

To display the *Main Menu*, turn the device on and/or press and hold the  key for 3 seconds. The *Main Menu* consists of the following sections: *Books*, *Pictures*, and *Settings*.

READING BOOKS


The following book formats are supported: eReader DRM, FictionBook (.fb2), Plain Text (.txt), Mobipocket (.mobi), PRC, EPUB, RTF, PDF. For best performance, it is recommended that you use TXT (text) files.

Reading Books

- In the *Main Menu*, select *Books* by pressing  or  and then press *OK*.
- ✓ When a list of items is displayed, press  to change font size.
- Use ,  or  to scroll through the list.
- To open the *Option* menu, press .
- Press the corresponding numeric key on the right-hand side of the device to open the respective item. Alternatively, select it by pressing  or  and then press *OK*. If you have opened a wrong item, press  to go back.











When in the reading mode, use  to activate the *Function* menu which has the following options: *Dictionary, Bookmark List, Bookmark This Page, Find, Jump To, Settings.*

Selecting Language for Books

- When in the reading mode, press  to activate the *Function* menu.
- In the *Function* menu, choose *Settings / Encoding.*
- Select the appropriate encoding, if applicable.

Selecting Dictionary and Translating Unfamiliar Words²

The English⇔Russian, English⇔Polish, English⇔Spanish, English⇔German, and English explanatory dictionaries built into *ECTACO® jetBook® – Lite* allow you to instantly translate an unfamiliar word.

- When in the reading mode, press *6*.
 - Alternatively, press  and then select *Settings* in the menu that appears.
- Select *Dictionaries.* You will see the *Dictionaries* list.
- Select the desired dictionary for use in the book.
- When in the reading mode, press *1*.
 - Alternatively, press . You will see the *Function* menu.
 - Select the *Dictionary* option. The menu will disappear.
- Press , , ,  to highlight the word you want to translate.
- Press *OK.* You will see the translation window.
- Use ,  to scroll through the dictionary entries.
- Use ,  to switch between dictionaries.
- Press *OK* to enter a new search term in the *Find* window.

TRANSFERRING BOOKS AND PICTURES

- Turn the device on. Turn your PC on.
- Unfasten the mini-USB port cover and then connect *ECTACO® jetBook® – Lite* to your computer using the supplied USB cable.

You will see the *Removable Disk* popup, and one removable disk icon (if no SD card is installed) or two removable disk icons (if an SD card is installed) will appear in the *My Computer* window.



- In the *My Computer* window, double-click the removable disk icon. When browsing through the contents stored in the internal memory of the device, you will see the following folders: *Books* and *Pictures.* **Do not delete or rename these folders!**
- Copy your files to the respective folders. For example, copy your books to the *Books* folder.
- ✓ There is no such a restriction for the files stored on the SD card.

² Check our Web site www.jetbook.net for the latest information about the formats that are supported.





- To disconnect *ECTACO® jetBook® – Lite* from your computer, click the *Safely Remove Hardware* icon at the bottom right of the screen and then select *Safely remove USB Mass Storage Device* in the menu that appears.
- In the *Main Menu*, open the desired section – *Books* or *Pictures*. You will see the items you have copied and the preinstalled items, if any.

VIEWING PICTURES

ECTACO® jetBook® – Lite is capable of storing and displaying pictures in JPG, GIF, PNG, and BMP formats.

- In the *Main Menu*, select *Pictures*. You will see the *Pictures* list.
- Select the desired file by pressing ,  and then press *OK*.


With a picture displayed, use:

-  to page up / page down;
 -  to switch screen orientation (portrait/landscape);
 -  to activate the *Functions* menu which has the following options: *Rotate*, *Zoom In*, *Zoom Out*, *Full Screen*, *Original Size*, *Auto Turn Page*;
 -  to change zoom level.
- ✓ You can also change zoom level by pressing alphanumeric keys on the right-hand side of the device.

ENTERING LETTERS AND NUMBERS

When entering a text, press the *Page Up / Page Down* keys to switch between English (*Eng*), Russian (*Rus*), Polish (*Po*), Spanish (*Spa*), German (*Ger*), T9 English (*T9 Eng*), T9 Russian (*T9 Rus*), T9 Polish (*T9 Po*), T9 Spanish (*T9 Spa*), T9 German (*T9 Ger*), and numeric (*123*) input modes.

The T9 text input method uses built-in dictionaries that recognize the most commonly used words for each sequence of keystrokes.

- Enter the word by pressing one key per letter. Use  for Backspace.
- ✓ The succession of letters displayed on the screen is not valid until the whole word is typed.
- Select the desired word and press *OK*.

SETTINGS

Fine-tune your *ECTACO® jetBook® – Lite* by selecting options in the *Settings* section.

- In the *Main Menu*, select *Settings*. You will see the *Settings* menu which has the following submenus: *User Settings*, *System Settings*, *Internal File Manager* and *SD Card File Manager*.
- ✓ In *ECTACO® jetBook® – Lite*, you can select a menu item by pressing the corresponding numeric key on the right-hand side of the device.